


Attaching the NX Mixer


STEP 1:

Flip the NX over, remove the hand strap and open the battery compartment. Pull the two rubber rings off of the battery compartment cover. Pull the battery pack out but do not disconnect.

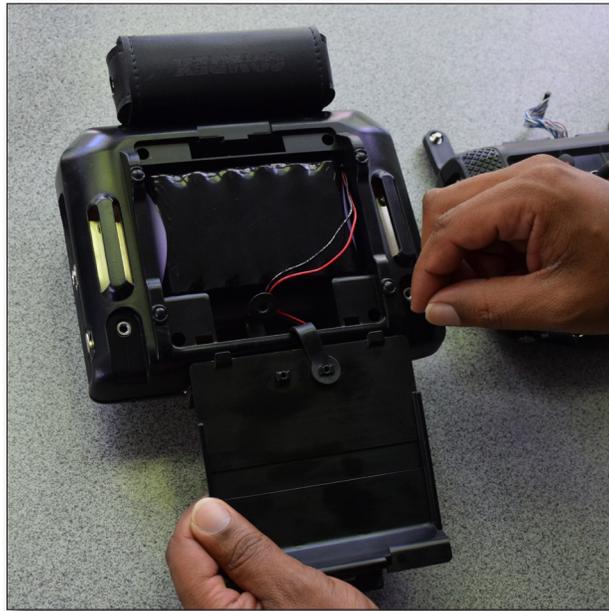

STEP 2:

Feed the connector and wires through the bottom slot under the rubber gasket. Pull the wires from the inside, if necessary, to insure wires are not pinched. Connect the wires into the connector of the NX, as shown below. Press firmly until the side plastic pieces come up around the connector.

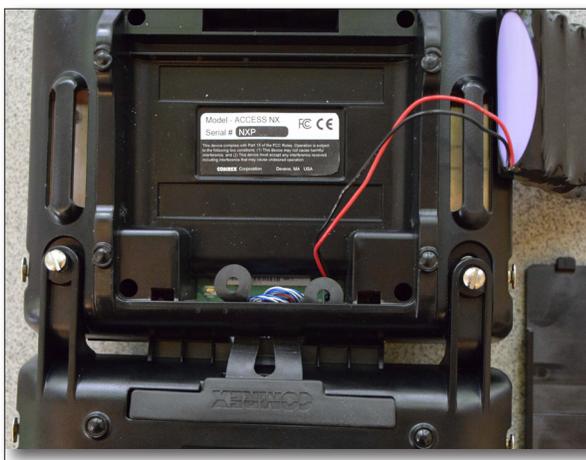


STEP 3:

Hold the mixer at a slight angle and insert into the bottom slot. Check the wires are safely inside and tilt the mixer so that it is in alignment with the NX.



STEP 4:

Tighten the screws, place the battery pack back into the NX

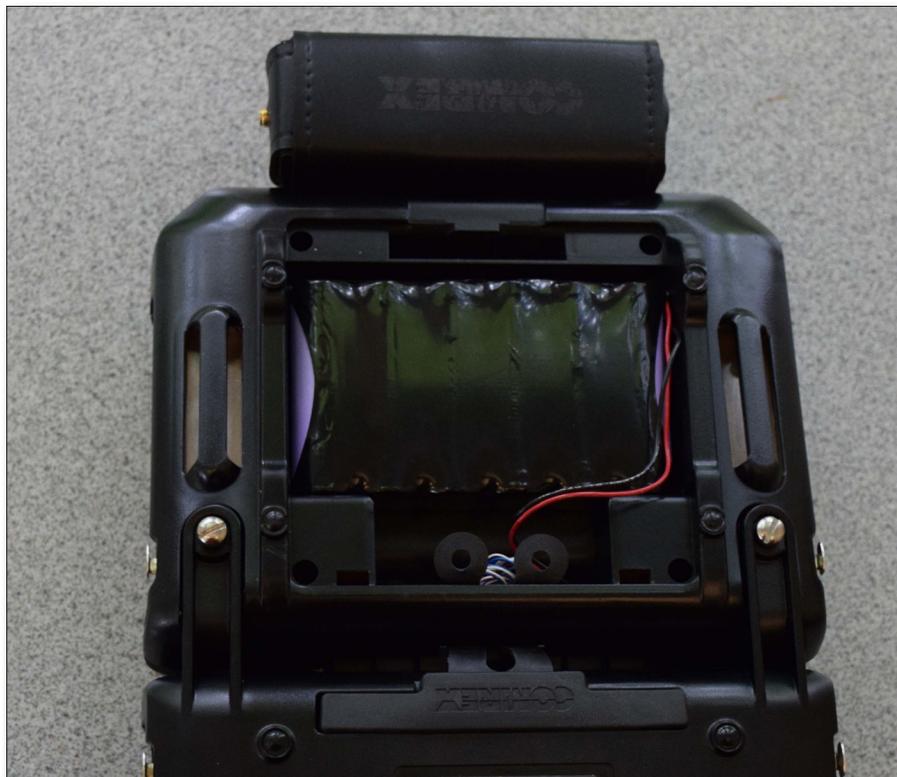

Attach the two rubber circles back to the battery compartment plate and place back onto the NX. Reattach hand strap. Insert rubber gasket into the groove on the mixer.